

Koala

TUBE
ITALIAN PRESTIGE CD PLAYER

OWNER'S MANUAL

MANUFACTURED IN ITALY

TEL.+39.0571.675005 FAX.+39.0571.675013

Table Of Contents

- Congratulations & Introduction	3
- Contents of Packaging - Construction Features	4
- Set-Up Instructions - Positioning – Operating Conditions	4
- Operating Conditions	5
- Remote Control Function	6
- Technical Specifications	7
- Warranty, Customer Service, Warnings & F.A.Q.	8
- Troubleshooting	9

Congratulations

Thank you for having purchased a GOLDENOTE® product.

Introduction



With the latest version of the acclaimed line of Koala CD Players we introduced even a new brand name than will identify the digital players more specifically. The new name we thought to use recall the best solution the market offer but even the original product line from which it comes: **Goldenote®**

As usual even with the new line Goldenote we designed a range of products of prestigious and sophisticated Italian look

featuring unique and innovative technical characteristics.

The KOALA is the affordable Goldenote® CD player line built on a standard rack chassis. The transport is of the drawer type and is designed to achieve excellent rotational stability with even a new sophisticated Dual-Speed™, our famous automatic speed control enable the mechanic-transport to generate the minimum vibration possible.

The KOALA despite its affordable price, is a truly audiophile CD Player using the latest Goldenote digital technology and output proprietary filter called Zero-Clock™.

The internal DAC uses a proprietary filter that enables the unit to reproduce a very large bandwidth with low signal compression.

The new Electro-Power™ voltage power supply of the KOALA is the first automatic servo assisted power supply installed in a consumer CD Player. The Electro-Power™ also allows the unit to have an electronic stability particularly efficient.

The transport motor controlled by the innovative Electro-Power™ enables the CD player to lower the speed fluctuation to less than 0,0001% in any electrical system within 100 to 260 volt range.

Also the Electro-Power™ electrically isolates the CD Player to guarantee the best sound performances available.

Contents of Packaging

- 1 PLAYER UNIT SET INTO A 19" CHASSIS
- 1 REMOTE CONTROL
- 1 DETACHABLE AC POWER CHORD
- INSTRUCTIONS AND WARRANTY CERTIFICATE.

Construction features

This section describes the special features of the KOALA CD Player , the construction features, the reasons for the technical choices and the originality of the design.

- The KOALA is a CD Player made in a dimensionally standard rack chassis.
- The chassis is particularly heavy to help dissipating vibration feedback.
- The KOALA TUBE features two 6DJ8/6922 Tubes on the output stage
- The Dual-Speed™ system enables the unit adjust the disc rotation speed depending on the effective need improving the laser track ability.
- The Electro-Power™ allows a precise and fine voltage setting in any specific critical area of the electronic circuit where variations may affect the sound quality.
- The Zero-Clock™ fight the jitter digital problem rephrasing the Clock of the unit.

Ser-Up Instructions

This section describes how to assemble and install your KOALA CD Player . The instructions are purely descriptive and necessarily generic. If you have any doubts or difficulties with this procedure please contact your retailer who will know how to assist you.

- 1) Open all the cartons inside the main box and look that all the components listed in the “content section” are present.
- 2) Carefully remove the Koala CD Player chassis from the shipping box and foam.
- 3) Level carefully the unit on a solid shelf properly aerated to let the unit cool down.
- 4) Connect the audio cable (not supplied) to the amplifier. Note that the Koala CD can be connected to RCA unbalanced analog output or to the Balanced XLR analog output but not both at once.
- 5) The unit features a 75ohm coaxial digital output for eventual connection to external Digital/Analog converters.
- 6) Connect the AC chord supplied.
- 7) The Master Switch of the unit is put on the back panel. The front panel switch works exclusively as stand-by leaving the unit partially on.









Koala back panel

Operating Conditions

Once the Koala has been correctly assembled and positioned on a solid shelf and fully wired the player is ready to play.


The Koala front Panel replies six basic function of the unit:

-  **STAND-BY** - It turns the unit in a Stand-By mode only. To turn off the unit completely the Master Switch on the back panel must be turned off.
-  **STOP**
-  **SKIP Forward** Skip the track. Keeping pressed the unit searches on the track listened FFW.
-  **SKIP Reverse** Skip the track. Keeping pressed the unit searches on the track listened RWD.
-  **PLAY** It lets start playing the disc. Pressing again the PLAY button the unit turn into the PAUSE mode then continuing pressing the button the unit turns Playing and Pausing alternatively.
-  **OPEN/CLOSE**

The substitution of the tubes must be done exclusively from an authorized Goldenote® technician otherwise the warranty will be invalidated.

The CD Player must be kept OFF at least 30 seconds before turning it ON again otherwise it may get in protection the unit freezing up all the functions.

REMOTE CONTROL

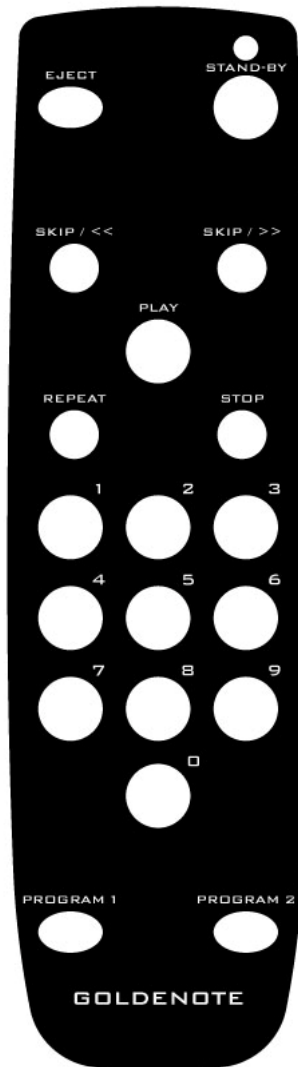

- During PLAY mode the STAND-BY button turns off the display for user convenience. To let unit turn in stand by from the remote the Koala must be in STOP mode.
- To access directly to the tracks dial the number and wait for automatic track access.
- REPEAT mode works on a single track repeat pressing the button once. Repeat all the disc pressing the button twice.

PLEASE NOTE: The POWER button works only as stand-by. To completely turn OFF the unit the panel ON/OFF button must be used. Turning OFF the unit from the remote will leave the output circuit section completely ON.

PLEASE NOTE: The PROGRAM 1 & 2 buttons work only to set the unit and special functions not available as default.

Technical Specifications

The following data describe the basic technical specifications of the Koala CD player at the time of drafting this manual. The specifications are subject to modification without notice. The product complies with the requirements laid down in the EC regulations.

DIMENSIONS:	440mm L x 100mm H x 340mm D
WEIGHT:	Kg. 8,00
FREQUENCY RESPONSE:	20Hz - 20KHz @ +/- 0,3dB
ANALOG OUTPUT LEVEL:	2,5 volt RMS
THD (Total Harmonic Distortion):	0,08% Max.
SIGNAL-NOISE:	80dB
DYNAMIC RESPONSE:	125dB
SPEED FLUCTUATION:	0,0001% Max.
DAC:	24bit – 192KHz
DIGITAL OUTPUT:	75ohm
ANALOG OUTPUT:	Stereo RCA & XLR Balanced
POWER SUPPLY:	100/260Volt 50/60Hz Super Linear
POWER CONSUMPTION:	50watt Max.

Warranty Certificate

The warranty certificate is enclosed separately and to be valid must be completed fill and returned to Goldenote factory or the official distribution. In all countries where there is an official distribution network, the dealer must stamp the warranty certificate. In compliance with the laws in force, the dealer may modify the official Goldenote warranty certificate wholly or partially without notice and without further mention being made in this instruction manual.

Due to the particular kind of item the warranty does not cover the tubes at all.

Customer Service

All GOLDENOTE® products are the result of meticulous technological research, and consequently their correct functioning is guaranteed. In spite of this it is possible that problems may emerge which non-specialist users cannot resolve. In this case, contact your dealer who will advise you on how to resolve the problem.

Do not return any object directly to the factory or to the national distributor or without being authorized to do so. In such cases both GOLDENOTE® and the distribution agents operating within your territory decline responsibility of any kind.

Please Note: Descriptions and technical characteristics may vary in any moment without notice.

Warnings

1. Do not disassemble any part of the product.
2. Do not use any part of the product for other purposes.
3. For service and problems of any kind, contact qualified personnel.
4. Protect the product from rain and humidity and keep away from heat sources, electric and electronic motors etc.
5. The power Chord supplied must be used only on this unit.
6. Goldenote does not have responsibility for any improper use of this unit

(F.A.Q.)

ACTION	DESCRIPTION	HOW TO ADJUST IT
LEVELLING THE CD PLAYER	<ul style="list-style-type: none"> • <i>The CD Player is not performing top level</i> 	<ul style="list-style-type: none"> • Take care of levelling the unit with the help of a spirit level.
The CD PLAYER tray does sticks open even when the display shows "closing" after the right command is pressed	<ul style="list-style-type: none"> • <i>The CD Player bottom rails are dry or dirty</i> 	<ul style="list-style-type: none"> • With EXTREME care exclusively using alcohol and a soft 100% cotton cloth sweep dust and stains out. Drop some liquid but adhesive oil of the tray rails and move the part in&out to share it well.
CLEANING THE CD PLAYER	<ul style="list-style-type: none"> • <i>The CD Player is dirty and needs to be cleaned</i> 	Clean the Player exclusively using alcohol and a soft 100% cotton cloth sweep dust and stains out. Do not touch the writes of the front panel ever. Any acid or synthetic cloth may irreversibly damage the CD Player fine aesthetic.

Troubleshooting

SYNPTOM	DESCRIPTION	CAUSE	REMEDY
THE CD PLAYER DOES NOT START WHEN THE UNIT IS SWITCHED ON		<ul style="list-style-type: none"> The AC CD Player plug is disconnected from the AC wall plug 	<ul style="list-style-type: none"> Connect it being sure that the AC wall plug works
		<ul style="list-style-type: none"> The Fuse is blown 	<ul style="list-style-type: none"> Let your official Goldenote dealer opens the unit and change the fuse. Don't do it by yourself to preserve the warranty valid
		<ul style="list-style-type: none"> The Unit is been turned ON and OFF too quickly and turned into protection. 	<ul style="list-style-type: none"> Turn OFF the unit exclusively from the back panel switch, wait 30 seconds before turning ON again the player.
	<i>The Disc just does not start</i>	<ul style="list-style-type: none"> The disc in the drawer is not put with the label side UP 	<ul style="list-style-type: none"> Properly insert the disc with label UP
		<ul style="list-style-type: none"> The disc inserted in ruined or very dirty on its reading side 	<ul style="list-style-type: none"> Change or clean the disc with a soft cloth.
		<ul style="list-style-type: none"> The Unit follows the RED BOOK format while is compatible with most of the audio/video disc available on the market 	<ul style="list-style-type: none"> The mechanic may sometimes doesn't accept some records or read anti-copy hidden file of multi-media disc.
DIGITAL RCA OUTPUT DOES NOT WORK	<i>When the CD Player is connect to an external D/A Converter does not work</i>	<ul style="list-style-type: none"> Check the functionality of the D/A Converter 	<ul style="list-style-type: none">
		<ul style="list-style-type: none"> The Cable used for connection is not 75ohm digital cable 	<ul style="list-style-type: none"> Substitute the digital cable with a 75 ohm one
		<ul style="list-style-type: none"> Your AC home system is not grounded 	<ul style="list-style-type: none"> Contact your dealer for assistance
DIGITAL RCA OUTPUT DOES NOT WORK		<ul style="list-style-type: none"> The Koala is not supplied with any Digital Output 	<ul style="list-style-type: none">
REMOTE CONTROL DOES NOT WORK	<i>Remote control does not reach any CD Player function</i>	<ul style="list-style-type: none"> Batteries are not inserted in the remote control or out of work 	<ul style="list-style-type: none"> Insert new batteries properly
		<ul style="list-style-type: none"> One or more rubber buttons are pushed inside their slots 	<ul style="list-style-type: none"> Re-fit the rubber buttons well
REPEAT FUNCTION DOES NOT WORK	<i>The CD Player does not repeat the discs during playing</i>	<ul style="list-style-type: none"> The Remote control does not reach the CD Player receiver during the REPEAT Operation 	<ul style="list-style-type: none"> Check the remote control batteries work properly. To activate the repeat function the button must be pressed once for the "ONE TRACK repeat" and twice for "REPEAT ALL disc"
SPEAKER HUMMING PROBLEMS	<i>The speakers hum when the CD Player is connected to the system</i>	<ul style="list-style-type: none"> 	<ul style="list-style-type: none"> Be sure in your home AC system ground is correctly grounded
CD PLAYER DOES NOT READ SOME DISCS		<ul style="list-style-type: none"> The CD Player is designed under the RED BOOK standard technology. Even though the unit is compatible with all digital disc format (except SACD) it may happen that some disc of the extremely variety available on the market may be not read correctly by the unit 	<ul style="list-style-type: none"> Always verify the disc (especially the CD-R and CD-RW) are compatible with the unit. The unit CAN NOT play the MP3 Files.
UNSTABLE AUDIO SIGNAL or UNBALANCED AUDIO OUTPUT	<i>The internal s are ruined or burned-out</i>	<ul style="list-style-type: none"> The unit worked for several hundreds hours or they had a electrical shock. 	<ul style="list-style-type: none"> Contact your dealer to replace the tubes